



## READY-TO-USE DISPOSABLE GRILL

P&M Products, Inc.  
6619 132nd Ave. NE #206 Kirkland, WA 98033

(800) 887-7345  
www.ezgrill.com

**FOLLOW THESE INSTRUCTIONS FOR SUCCESSFULL USE OF THE EZ GRILL. CONTACT US WITH ANY QUESTIONS... AND ENJOY!**



Remove cellophane packaging and read all instructions and warnings on reverse of top sheet.



Remove grill and stand from cardboard tray. Dispose of all packaging carefully and responsibly.



When packaged, the grill fits inside the stand to save space, but must be set up prior to lighting. Rotate the grill 1/4 turn (90 degrees) and set on the stand. Move the grill and stand to a firm, non-flammable and heat resistant surface.



Light one corner of starter sheet (located underneath metal grill) with a match or lighter.



Do not start cooking or put food on grill until flames have died down and charcoal has a coating of ash. (about 15 minutes)



You're ready to grill!

Immediately after cooking has finished, extinguish completely with water, sand or dirt and recycle the used grill if possible. Wait until grill and stand are completely cool before disposing on them.